




# YELLOWSTONE

96 - 114 - 132 - 150 - 168

Interrasassi  
Stone Burier  
Enfouisseuse

## TRASMISSIONE - DRIVE TRAIN COMPONENTS - TRANSMISSION

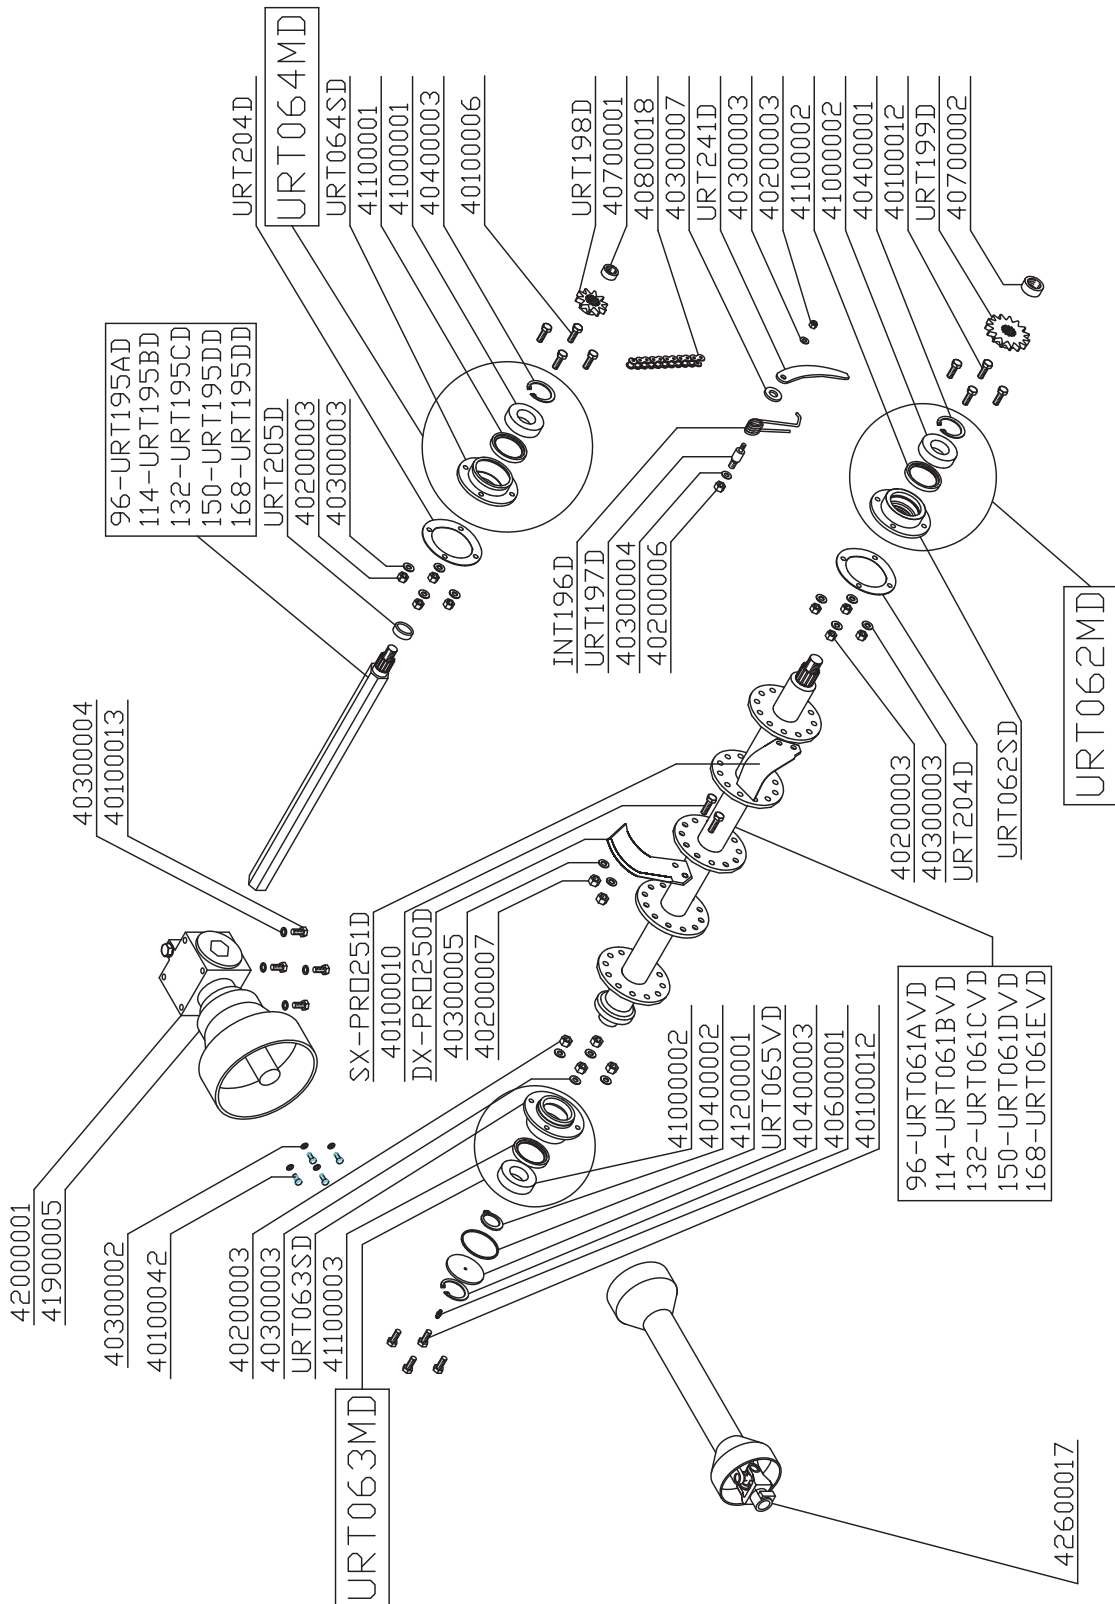




# YELLOWSTONE

96 - 114 - 132 - 150 - 168

Interrasassi  
Stone Burier  
Enfousseuse

## TELAIO - FRAME - CHASSIS

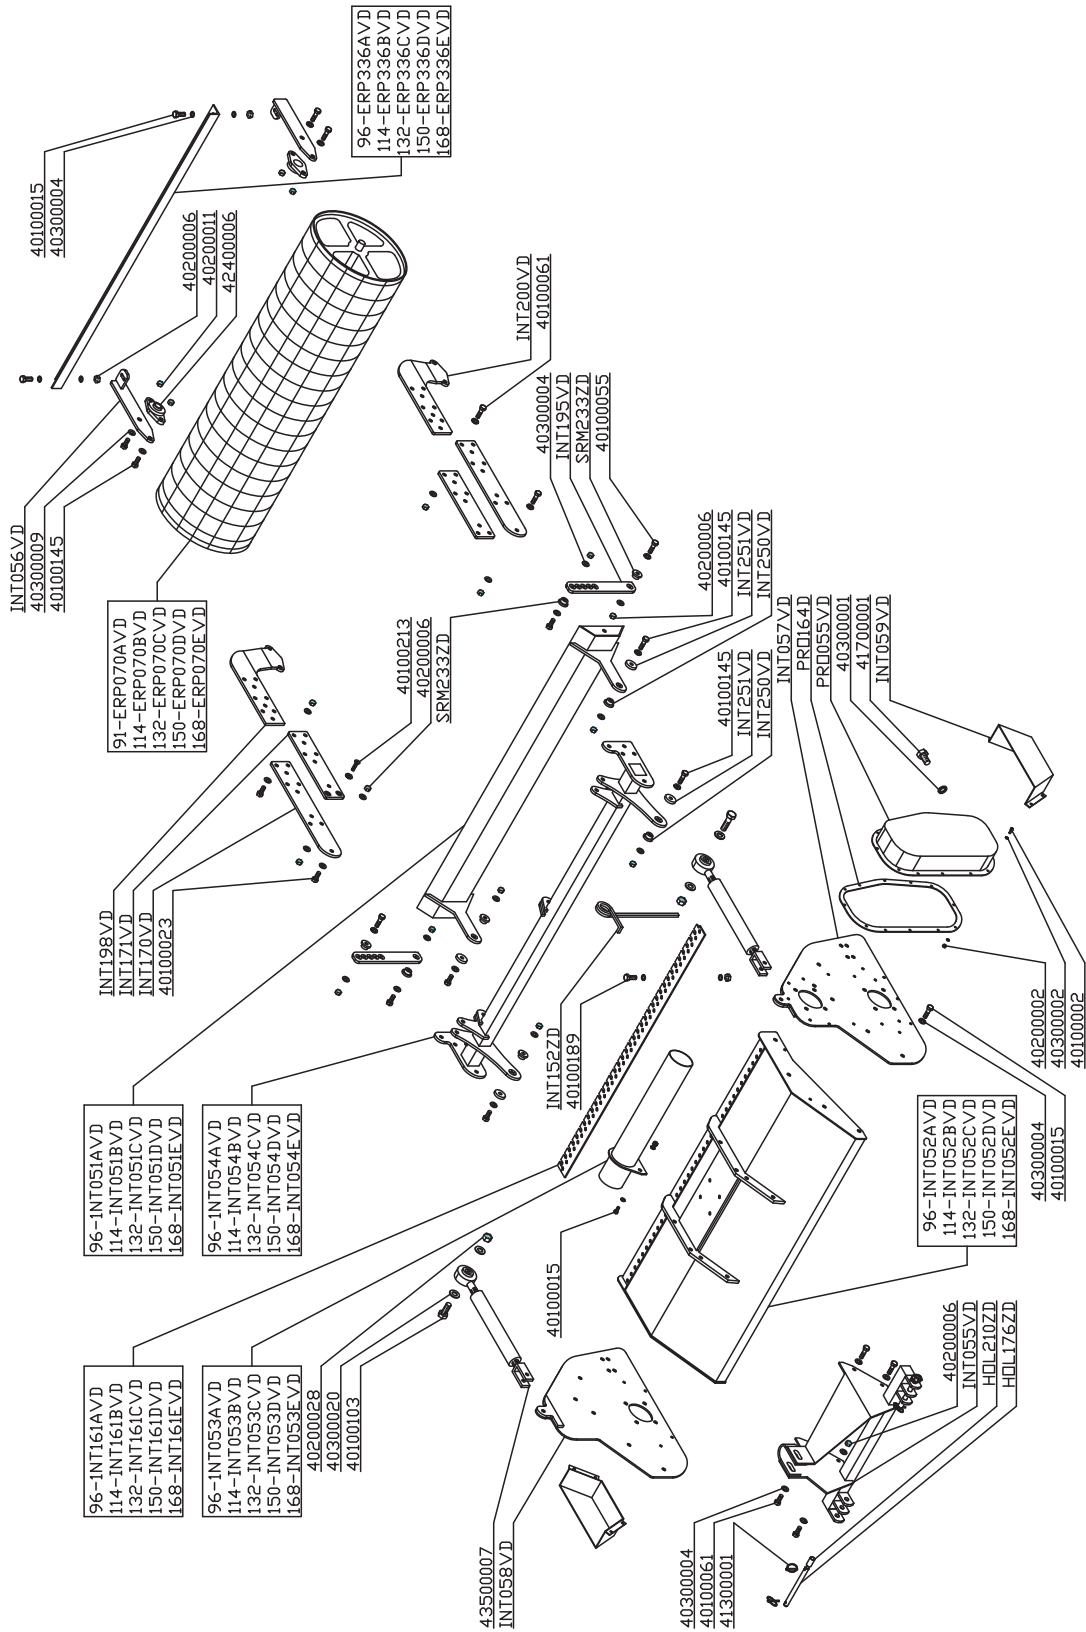



# YELLOWSTONE

96 - 114 - 132 - 150 - 168

Interrasassi  
Stone Burier  
Enfouisseuse

## SUPPORTO SEMINATRICE - SEEDER SUPPORT - SUPPORT SEMOIR

